




LABORATORY LINES

COLOR LIGHT BOX



Kalstein®

A different accompaniment, at your service

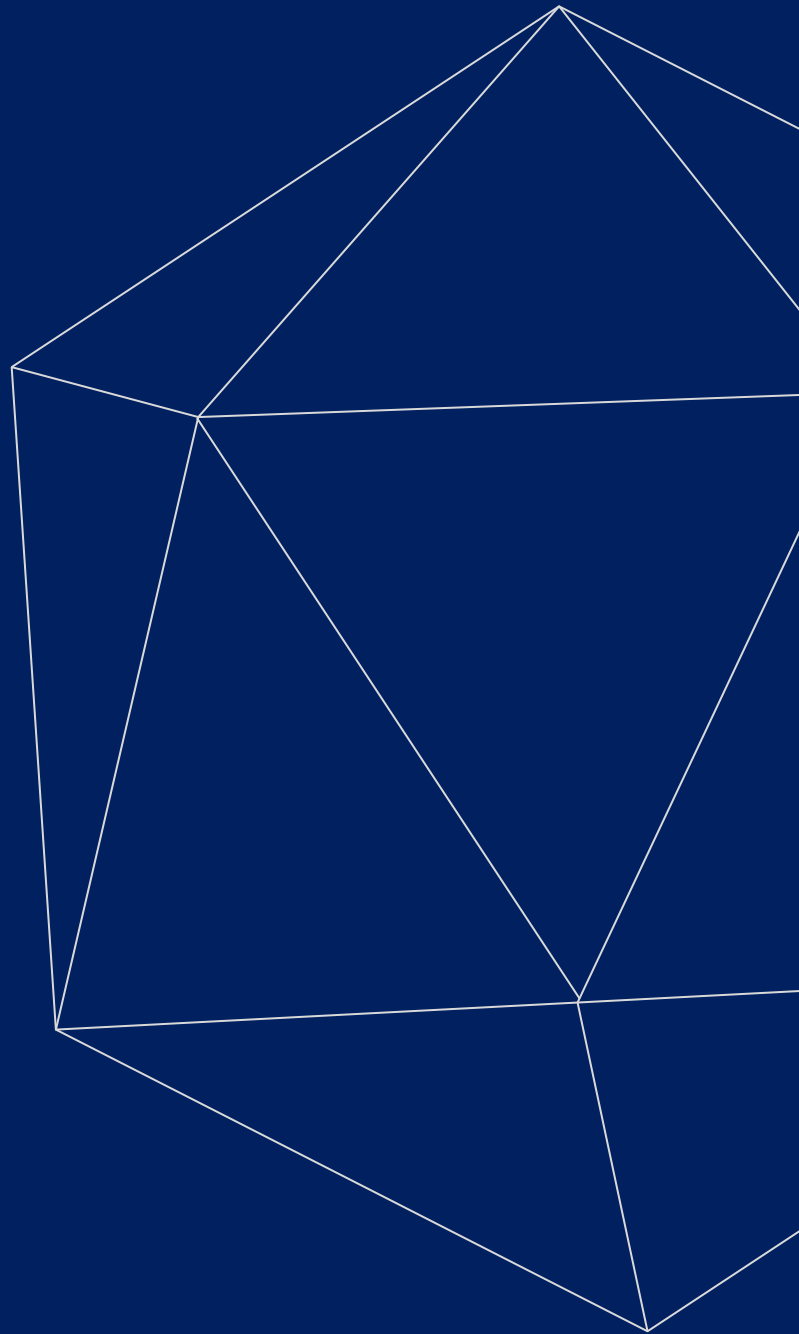



Kalstein®

A different accompaniment, at your service

OUR SERVICES

Benefits and Support

In Kalstein France, we take care of the full satisfaction of our customers, that is why we provide value-added services of the highest level based on our experience.



Online Inductions and Trainings

In any part of the world, receive your induction or training from our specialized team of engineers



Quick Response

Our work team is always available to response all your consults or questions, in order to support you in any situation.



#Letsgivemore ♥

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



Technical Support

Enjoy of personalized advice for the correct preventive and corrective maintenance of your equipment, thanks to Kalstein's manuals and articles, special catalogues and video tutorials.



Delivery Logistics

We take care of all the necessary logistics for the dispatch of your goods, whether is by sea, land or air.



Kalstein Worldwide

With more than 25 years growing with our customers, Kalstein's multiformat and modern content, is now present in more than 10 countries and increasing.



KALSTEIN® Standard Color Light Box

YR05531



Kalstein's YR05531 color light box will show the using time, light source name and switch times of each light source. Automatically switch and with the function of metamerism, Without preheating and no flicker. Low energy consumption and high luminous efficiency, this products is equipped with whole sets of British and American standard light sources. Contains A light source in American Standard changeable.

With six-light sources light box adopts fully computer-controlled light-touch buttons to switch light sources at will and can permanently record the name of each light source, the use time and the number of switching times. It has the function of testing the metamerism effect. It is implemented in accordance with international standards (ISO, ASTM, DIN, BSI, ANSI, CIE), and passes the national measurement inspection with an authoritative test report.

Application Industry

YR05531 Six sources standard light box is suitable for color management in textiles, toys, printing and dyeing, plastics, paints, inks, printing, pigments, chemicals, ceramics, footwear, leather, hardware, food, cosmetics and other industries, used to accurately check the color deviation of items.



Features

- YR05531 color light box will show the using time, light source name and switch times of each light source.
- Automatically switch and with the function of metamerism.
- Without preheating, no flicker.
- Low energy consumption and high luminous efficiency.
- Equipped with whole sets of British and American standard light sources.
- Contains A light source in American Standard.
- The name of light sources is changeable.
- TILO is international famous brand.



#Letsgivemore ❤️

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
2 Rue Jean Lantier • 75001 Paris •
+33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
KALSTEIN FRANCE, S. A. S



KALSTEIN® Standard Color Light Box

YR05531



Model	YR05531
Project	Parameters
Configuration	F, D65, TL84, UV, CWF/TL83, A in Total Six Light Sources
Weight	28Kg
Size(L*W*H)	71 0x530x570 mm
Optional Accessory	Light source diffuser, 45 degree standard stand

Name	Color Temperature	Power
D65 International standard Artificial Daylight	6500K	18W
TL84 Applied to stores in Europe, Japan and China	4000K	18W
CWF (Cool White Fluorescent) American Standard	4150K	18W
F "Sun-setting Light Yellow" incandescent light source (imitation of sunset)	2700K	40w
UV Viewing under ultraviolet light to detect and evaluate optical brighteners or fluorescent pigments	365nm	18w
A American shopwindow spotlight	2856K	60w
TL83 Warm White Fluorescent European Standard	3000K	18w



Plastics



Paint & Ink



Printing




Food



Textiles



Medicines

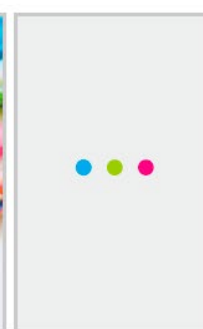

Others



#Letsgivemore

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
 2 Rue Jean Lantier • 75001 Paris •
 +33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
 KALSTEIN FRANCE, S. A. S





A different accompaniment, at your service

WITH THE ACQUISITION OF A KALSTEIN EQUIPMENT

YOU MAKE A CONTRIBUTION TO:

#LETSGIVEMORE 



Fundación
Jacinto Convit

<https://www.jacintoconvit.org/>



<https://onetreepanted.org>



Humatem

Solidarité et coopération
biomédicale

<https://www.humatem.org/>




MANIAPURE
FOUNDATION USA

<https://www.maniapurefoundation.org/>

Thank you!

Articles Kalstein
(Social Networks and Official Websites)

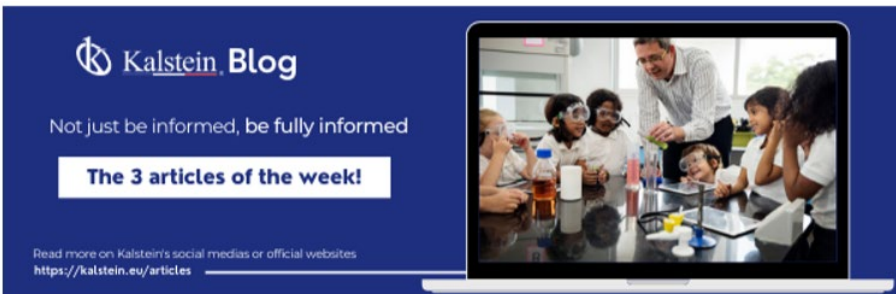

Kalstein Blog
Not just be informed, be fully informed
The 3 articles of the week!
Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>



1
Read this ARTICLE NOW
How does the climate affect your microscope?
A microscope is an instrument that allows observing and measuring objects that are too small to be seen with the naked eye. This is achieved through a complex system of lenses and mirrors, which form...

Kalstein Blog
Article of the week:
How does the climate affect your microscope?
Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>



2
Read this ARTICLE NOW
What is the importance of the laboratory refrigerator?
A refrigerator is a device that is one of the most common pieces of equipment used in laboratories to maintain, in a controlled environment (refrigerated space), various fluids and substances...

Kalstein Blog
Article of the week:
What is the importance of the laboratory refrigerator?
Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

Kalstein Training Videos
(Youtube Channel and Official Websites)



Kalstein France - Jacinto Convit Foundation / Alliances
23 views • 3 years ago



Kalstein's Microscopes
445 views • 1 week ago



PARIS - FRANCE
HEADQUARTER
2 Rue Jean Lantier
75001 Paris - France

Tlf: +33 (0) 01 78 95 87 89
Cel: +33 (0) 6 80 76 07 10
sales@kalstein.eu

<https://kalstein.eu/>
<https://www.kalstein.fr/>

